

TV Channels and Frequency Blocks

By TV Channel in Ascending Order

FREQUENCY MHz

CHANNEL		FROM	TO
2		54	60
3		60	66
4		66	72
5		76	82
6		82	88
7		174	180
8		180	186
9		186	192
10		192	198
11		198	204
12		204	210
13		210	216
14		470	476
15		476	482
16		482	488
17	BL19	488	494
18	486.4	494	500
19	-	500	506
20	511.9	506	512
21	BL20	512	518
22	512.0	518	524
23	-	524	530
24	537.5	530	536
25		536	542
26	BL21	542	548
27	537.6	548	554
28	-	548	554
29	563.1	554	560
30		560	566
31	BL22	566	572
32	563.2	572	578
33	-	578	584
34	588.7	578	584
35		584	590
36	BL23	590	596
37	588.8	596	602
38	-	602	608
39	614.3	602	608
40		608	614
41	BL24	614	620
42	614.4	620	626
43	-	626	632
44	639.9	626	632
45		632	638
46	BL25	638	644
47	640.0	644	650
48	-	650	656
49	665.5	656	662
50		662	668
51	BL26	668	674
52	665.6	674	680
53	-	680	686
54	691.1	680	686
55		686	692
56	BL27	692	698
57	691.2	698	704
58	-	704	710
59	716.7	704	710
60		710	716
61	BL28	716	722
62	716.8	722	728
63	-	728	734
64	742.3	734	740
65		740	746
66	BL29	746	752
67	742.4	752	758
68	-	752	758
69	767.9	758	764
70		764	770



BL470
470.1
-
495.6

Formula for blocks 21-29:
25.6 x block number =
lowest freq. in the block

TV 37 is blocked in BL23

NONE	SPECIAL	944.1	951.9
------	---------	-------	-------

Limited to 8 MHz band