

# DCR12/A5U

## TECHNICAL DATA

### Power Supply


#### Description:

AC power supply intended for Lectrosonics IFBT4, IFBT4-VHF and IFBT4/E01 transmitters.



5-piece kit includes international adapters

4-piece Blade/Post kit is available separately P/N 55013

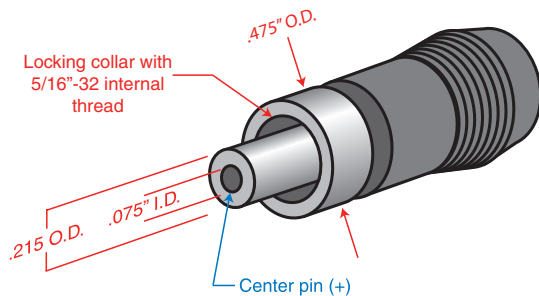

#### Specifications

Input voltage:	100-240 V, 50/60 Hz, 0.3 A
Output power:	6.0 W
Output voltage:	12 VDC
Current Out (Amps):	.5 A
Power cord:	7 ft. length
Output connector:	LZR threaded locking plug
Wall jack adapters:	Interchangeable blades/posts for use in Europe, UK, Australia and USA

#### Interchangeable Blades/Posts

1. Decide which blade/post is appropriate for your country.
2. Ensure blade/post is lined up correctly by matching the rounded corners of the adapter with the rounded corners of the socket in the power supply.
3. Insert the adapter at an angle as shown.



4. Push down rounded edge of adapter to snap it into place.



5. Power supply is now ready to be plugged into appropriate power outlet.
6. To remove the adapter, pull the slide latch in the direction of the arrow on its surface.



581 Laser Road NE • Rio Rancho, NM 87124 USA • [www.lectrosonics.com](http://www.lectrosonics.com)  
(505) 892-4501 • (800) 821-1121 • fax (505) 892-6243 • [sales@lectrosonics.com](mailto:sales@lectrosonics.com)



12 July 2016