

# BAGFRAME

## TECHNICAL DATA

### BAGFRAME2-S, BAGFRAME2-M, BAGFRAME3-M, BAGFRAME3-T



- Solves the challenge of keeping multiple units accessible and upright in an audio bag.
- Three depth sizes to accommodate a variety of commercially-available bags, with slots to securely hold two or three receiver units.
- Durable anodized aluminum construction.
- Ultra-lightweight, corrosion-resistant



Separate mounting kits are required to use the BAGFRAME. Please refer to the part numbers for your specific receivers. You will need one kit or bezel for each unit mounted:

SRb and SRC:	ZS-BAGFRAME-SR-KIT
DCR822:	P/N 36022 - Snap-In Bezel
DSR/DSR4:	ZS-BAGFRAME-DSR4-DSR-KIT
UCR411/UCR411A:	P/N 36025 - Snap-In Bezel

## Items Included in the Box:



Front Panel  
(P/N 27379 or 27375)



Bottom Clamp  
(P/N 27381 or 27377)



Top Clamp  
(P/N 27380 or 27376)



Bottom Brace  
(P/N 27382 or 27378)

Mounting Blocks  
(P/N 27383)



Rear Supports  
(P/N P1414)



Extension Rods  
(P/N 27384, 27386  
or 27387)



Support Rods  
(P/N 27385)

1-1/2" screws  
(P/N 28872)



3/4" screws  
(P/N 28942)



5/16" screws  
(P/N 28645)



Phillips head screwdriver  
required for assembly  
(not included)

**NOTE: Unpack and line up your parts before assembly to confirm that all parts are present.**

	<b>BAGFRAME2-S</b> 8-3/8"L x 1-3/4"W x 6"T Width: 8.375" (213mm) Weight: 7.07oz (200.5g)	<b>BAGFRAME2-M</b> 8-3/8"L x 1-3/4"W x 7-1/2"T Width: 8.375" (213mm) Weight: 7.78oz (220.5g)	<b>BAGFRAME3-M</b> 11-7/8"L x 1-3/4"W x 7-1/2"T Width: 11.875" (302mm) Weight: 9.50oz (269.3g)	<b>BAGFRAME3-T</b> 11-7/8"L x 1-3/4"W x 8-3/8"T Width: 11.875" (302mm) Weight: 9.80oz (277.8g)
<b>Front Panel (1)</b>	27379	27379	27375	27375
<b>Top Clamp (1)</b>	27380	27380	27376	27376
<b>Bottom Clamp (1)</b>	27381	27381	27377	27377
<b>Bottom Brace (1)</b>	27382	27382	27378	27378
<b>Mounting Block (2)</b>	27383	27383	27383	27383
<b>Extension Rod (4)</b>	27384	27386	27386	27387
<b>Support Rod (4)</b>	27385	27385	27385	27385
<b>Rear Support (2)</b>	P1414	P1414	P1414	P1414
<b>5/16" black screw (5)</b>	28645	28645	28645	28645
<b>1-1/2" black screw (4)</b>	28872	28872	28872	28872

# Assembly Instructions



## STEP 1.

Place one mounting block between the flanges on the back side of the front panel at one end.

Be sure that the mounting block aligns with the edge of the front panel and that the rectangular cutout in the mounting block aligns with the matching cutout in the front panel.

Install one 5/16" screw through each of the flanges at the sides and tighten. Repeat at opposite end of front panel.



## STEP 2.

Thread two support rods into the threaded holes of each mounting block on both sides and hand tighten firmly.



## STEP 3.

Place top clamp onto the two support rods at the top of the front panel. Be sure the engraved "Top" is aligned with the "Top" side of the front panel.



## STEP 4.

Secure the top clamp in place by threading two extension rods through the top clamp into the support rods and hand tighten firmly, on both sides of the unit.

5



**STEP 5.**

If you are mounting a SR series or DSR, place the frame top down and hold the support collar on top of the top clamp as shown.

*NOTE: Separate mounting kits are needed to use the BAGFRAME system. Refer to chart on front cover. For this example, we will mount an SR and a DCR822. Each uses a different mount.*

6



**STEP 6.**

Place bottom clamp onto the two support rods at the bottom of the front panel. Secure the bottom clamp in place by loosely threading the 1-1/2" long screws in the center so that they go through the top clamp and into the bottom clamp.

7



**STEP 7.**


Install bottom extension rods and hand tighten.

8



**STEP 8.**

Attach mounting blocks to both ends of bottom brace, using 3/4" screws.

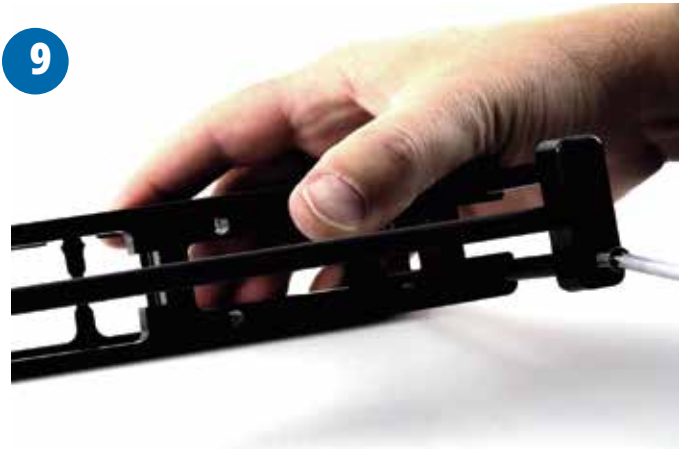

**STEP 9.**

Place mounting block assembly on top of extension rods and screw into place using 3/4" screws.



**STEP 10.**

Place front bezel of mounting kit into front panel until tabs "click." Install unit through bezel and secure with mounting screws (if supplied with kit).



- or -



Place front bezel of mounting kit into front panel until the tabs "click." Install unit through bezel (no screws are supplied for this type of mounting).

11



**STEP 11. (when all units are mounted)**

Once units are adjusted to the desired depth, firmly tighten the three screws in the top clamp.



---

**NOTE:** Small foam blocks will prevent your bag frame from shifting around in your bag

# Compatibility

Our frames are compatible with the popular bag models shown below. We encourage you to double-check the measurements of your bag before purchasing a frame system.

**NOTE:** Frames that fit smaller bags will fit into larger bags, though not as tightly.

	<b>BAGFRAME2-S</b> 8-3/8"L x 1-3/4"W x 6"T Width: 8.375" (213mm) Weight: 7.07oz (200.5g)	<b>BAGFRAME2-M</b> 8-3/8"L x 1-3/4"W x 7-1/2"T Width: 8.375" (213mm) Weight: 7.78oz (220.5g)	<b>BAGFRAME3-M</b> 11-7/8"L x 1-3/4"W x 7-1/2"T Width: 11.875" (302mm) Weight: 9.50oz (269.3g)	<b>BAGFRAME3-T</b> 11-7/8"L x 1-3/4"W x 8-3/8"T Width: 11.875" (302mm) Weight: 9.80oz (277.8g)
<b>K-Tek</b>	Small X Junior X	Junior X	Large X	Large X
<b>Orca</b>	OR-28 OR-30 OR-272 OR-280 OR-330	OR-272 OR-280 OR-330	OR-32 OR-34 OR-332 OR-334	OR-32 OR-34 OR-332 OR-334
<b>PortaBrace</b>	AO-833S AO-888S		AO-633S AO-688H AO-688S AO-1SILENTH AO-1SILENT+ AO-LIGHT AO-MIXPRE6S AO-MIXPRE10TS AO-MX422 AR-NOVA CAR-3AUD MXC-688SLX RM-MULTIB	AO-633S AO-688H AO-688S AO-1SILENTH AO-1SILENT+ AO-LIGHT AO-MIXPRE6S AO-MIXPRE10TS AO-MX422 AR-NOVA CAR-3AUD MXC-688SLX RM-MULTIB
<b>Sachtler</b>	SN607 SN614	SN614	SN602 SN617	SN602

