

REAR PANEL DESCRIPTION

SERIAL/FREQUENCY LABEL - This label indicates the serial number of the CDM4 module. It also indicates the RF pass-band of the unit. **IMPORTANT** - The CR185 receivers installed in the unit must fall between the frequencies indicated on the label. Serious signal loss results if the receivers are outside the RF pass-band.

POWER XLR CONNECTOR - This 4 pin Switchcraft D4M connector is the power input jack for both the CH-50 AC charger and for external 12V power. Pins 1 and 4 are used for 12 Vdc input. Pins 2 and 3 are utilized for 14 to 20 Vac charging voltage.

POLARITY DIAGRAM - The polarity diagram on the lower panel indicates the wiring connections for the 4 pin XLR power connector. Use this diagram when connecting your own external power source to the system.

9V ALKALINE BATTERY COMPARTMENT - The CDM4 module can operate from an internal 9V alkaline battery. Only alkaline or lithium batteries are recommended. Poor results may be expected with other battery types. This compartment opens by pressing in and to the right. The compartment will adjust to various battery sizes.

POWER LEADS - These connectors provide power for the individual receivers. Insert the connectors into the jack provided on each receiver.

INSTALLATION SCREWS - The two large counter-sunk phillips head screws in the central area between the receivers are used for receiver installation and removable. See page 5 for further instructions.

RECEIVER AUDIO OUTPUT - Supplies a balanced, low impedance output at microphone level. The audio signal is output on pins 2 and 3, while pin 1 is ground. The output level of this jack is controlled by the OUTPUT control on the front panel of the receiver. The connector is a standard XLR type.

RECEIVER POWER IN JACK - Connects to the POWER LEAD for powering the receiver from the PRO 4 mini source. A diode bridge is used in the external power input, so that the CR185 will operate properly from either polarity.

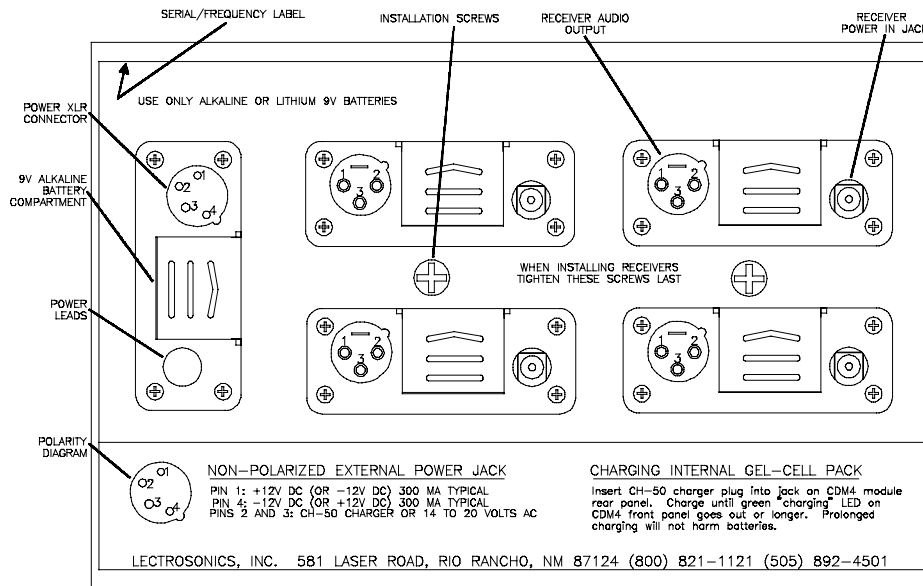


Figure 3 - PRO 4 mini Rear Panel

INSTALLATION

The CDM4 RF/power distribution module is permanently installed into the housing assembly and should never need to be removed except in the rare case of repair. Removal of the CDM4 module requires case disassembly and is not recommended.

The PRO4 mini is designed to contain up to four CR185 receivers. Installation of these receivers is quite simple. First, loosen but do not remove the two large counter-sunk phillips head screws in the front and two in the rear panels of the housing. These screws are located in the horizontal center band of metal between the receivers. (See Figures 2 and 3) Insert the CR185 receivers, front end first (the end with the antenna connection), in through the rear panel. Seat the front end of the receiver into the recessed lip of the PRO4 mini front panel. Make certain the antenna cables are positioned properly through the slot to the right of each opening. The rear panel of the receiver will extend the same amount as the rear panel of the CDM4 module when the unit is properly seated. Repeat this for each receiver to be installed. After each receiver is in place, tighten the front panel screws first. These screws should be fairly snug but excessive force should be avoided and is unnecessary. You are compressing a natural rubber tension tube. Then tighten the rear panel screws. Press firmly on the front of each receiver to be certain that there is no slippage and the receivers are secure.

At the front panel, attach the antenna leads to each receiver, making sure the BNC connector is securely twisted and locked into place. Set the power switch on the CR185's to the EXT position. Antenna leads serving empty slots do not need to be terminated.

At the rear panel, insert the power connectors into the power jack of each receiver. Note that the battery compartment of each receiver may still be opened. It is recommended that each receiver have a fresh battery in place to serve as backup power in the event that the PRO 4 mini battery pack or external power source fails for any reason.

OPERATING INSTRUCTIONS

After all the receivers have been installed, check to be sure that the receivers have their power switch set to EXT. Audio leads should be balanced audio cables leading to the mixer or recorder.

Turn the system on by switching the power switch on the CDM4 module to MAIN-EXT. The power indicator LEDs should light on all the receivers and the CDM4. If the internal gel-cell batteries are the power source, the 12V LED will light. If the CH-50 charger is connected and plugged into an AC source, the AC, 12V, and perhaps the CHARGING LEDs will be on as well. If the power source is an external 12 Vdc power supply, the EXT LED will be on.

Operate the wireless microphone according to the instructions included with the systems.

After use, recharge the system with the CH-50 adapter. The system incorporates industrial quality gel-cells which can be recharged regardless of length of use. There are no "memory" problems with these batteries. The CHARGING LED will activate to indicate the batteries are charging and will extinguish when the batteries are at full charge.

The CH-50 charger may also be used for AC operation.

The external 12 Vdc power supply may be connected to the system through the 4 pin XLR connector on the rear panel. The connection is made by supplying the voltage through pins 1 and 4. Polarity is not critical since each CR185 receiver contains a diode bridge at their external power input. When an external 12 Vdc supply is used the EXT LED activates. The internal batteries are automatically bypassed by a relay.

In emergencies, the system may also be operated from the internal 9V alkaline batteries in the individual receivers and the CDM4. Switch all units to the INT power switch position. Operating time should be about 4 to 5 hours with an alkaline battery, 8 to 10 hours with lithium.

TROUBLESHOOTING

SYMPTOM	POSSIBLE CAUSE
NO POWER LEDs OR AUDIO	1) Power switch in the OFF position. Switch to MAIN/EXT.
POWER LED LIGHTS ON CDM4 BUT NO LIGHTS ON CR185's	1) Power leads in back not connected to receivers. Check power connections.
NO POWER LEDs, ALL CONNECTIONS CHECK OK	1) Gel-cell battery charge too low. Either switch to INT 9V setting on CDM4, use an external 12 Vdc power supply, or operate on 110 Vac with the CH-50 charger. If the internal batteries are used, be sure that all the CR185 receivers are switched to INT power as well.
POWER AND MODULATION LEDs ON, BUT NO AUDIO	1) No audio connection to recorder or mixer. Check connections.
POWER LEDs ON, NO MODULATION LEDs	1) Transmitters not on or in mute position. Check transmitters. 2) Transmitters have dead batteries, check batteries.
POOR SIGNAL/NOISE OR DROPOUTS	1) Antenna leads not connected, Check antennas. 2) Main antenna improperly connected. Check antenna. 3) Antenna "blocked" or in poor RF location. Try moving the system or the antenna. 4) Transmitter modulation improperly set. Check mod levels.
INTERNAL GEL-CELLS NOT CHARGING	1) Check charger - Output voltage should be 14 to 20 VAC.

SPECIFICATIONS

CDM4 RF/POWER DISTRIBUTION MODULE

RF Gain:	1.5 dB
RF Output:	Four outputs, 50 Ohm, BNC
Filtering:	Two section helical resonator
Third Order Intercept:	+25 dBm
Power Input:	12 to 20 Vdc (either polarity) Pins 1 and 4 on XLR power jack CH-50 adapter for AC operation 14 to 20 Vac, 50/60 Hz, 1/2 Amp Pins 2 and 3 on XLR power jack 16 to 22 Vdc 1/2 Amp
Power Consumption:	45 mA (plus 55 mA for each CR185 receiver) Total 265 mA
Connectors:	RF: BNC POWER INPUT: 4 pin XLR (Switchcraft D4M) POWER OUTPUT: 2.5mm power jack A/D Electronics part # ADC-014
Short Circuit Protection:	Auto-reset thermal fuses (6)

PRO4 MINI SYSTEM

Construction:	Machined aluminum panels, housings, and mechanical parts.
Dimensions:	6 x 8 x 9 inches (in carrying case)
Weight:	14.25 lbs including 4 CR185 receivers
Batteries:	Two 6V, 4.8 Ah rechargeable gel-cells Panasonic LCR-456-P
Operating Time per Charge:	14.5 Hours

SERVICE AND REPAIR

If your system malfunctions, you should attempt to correct or isolate the trouble before concluding that the equipment needs repair. Make sure you have followed the setup procedure and operating instructions. Check out the inter-connecting cords and then go through the TROUBLE SHOOTING section in the manual

We strongly recommend that you **do not** try to repair the equipment yourself and **do not** have the local repair shop attempt anything other than the simplest repair. If the repair is more complicated than a broken wire or loose connection, send the unit to the factory for repair and service. Don't attempt to adjust any controls inside the units. Once set at the factory, the various controls and trimmers do not drift with age or vibration and never require readjustment. **There are no adjustments inside that will make a malfunctioning unit start working.**

LECTROSONICS service department is equipped and staffed to quickly repair your equipment. In-warranty repairs are made at no charge in accordance with the terms of the warranty. Out of warranty repairs are charged at a modest flat rate plus parts and shipping. Since it takes almost as much time and effort to determine what is wrong as it does to make the repair, there is a charge for an exact quotation. We will be happy to quote approximate charges by phone for out of warranty repairs.

RETURNING UNITS FOR REPAIR

You will save yourself time and trouble if you will follow the steps below:

- A. DO NOT return equipment to the factory for repair without first contacting us by letter or by phone. We need to know the nature of the problem, the model number and the serial number of the equipment. We also need a phone number where you can be reached 8 am to 4 pm (Mountain Standard Time).
- B. After receiving your request, we will issue you a return authorization number (R.A.). This number will help speed your repair through our receiving and repair departments. The return authorization number must be clearly shown on the outside of the shipping container.
- C. Pack the equipment carefully and ship to us, shipping costs prepaid. If necessary, we can provide you with the proper packing materials. UPS is usually the best way to ship the units. Heavy units should be "double-boxed" for safe transport.
- D. We also strongly recommend that you insure the equipment, since we cannot be responsible for loss of or damage to equipment that you ship. Of course, we insure the equipment when we ship it back to you.

Mailing address:

Lectrosonics, Inc.
PO Box 15900
Rio Rancho, NM 87174
USA

Shipping address:

Lectrosonics, Inc.
581 Laser Rd.
Rio Rancho, NM 87124
USA

Telephones:

Regular: (505) 892-4501
WATS: (800) 821-1121
FAX: (505) 892-6243

LIMITED ONE YEAR WARRANTY

The equipment is warranted for one year from date of purchase against defects in materials or workmanship provided it was purchased from an authorized dealer. This warranty does not cover equipment which has been abused or damaged by careless handling or shipping. This warranty does not apply to used or demonstrator equipment.

Should any defect develop, we will, at our option, repair or replace any defective parts without charge for either parts or labor. If we cannot correct the defect in your equipment, we will replace it at no charge with a similar new item. We will pay for the cost of returning your merchandise to you.

This warranty applies only to items returned to us, shipping costs prepaid, within one year from the date of purchase.

This warranty gives you specific legal rights. You may have additional legal rights which vary from state to state.

LECTROSONICS, INC.

**581 LASER ROAD
RIO RANCHO, NM 87124 USA**